

Data sheet

Solenoid valve

Types EVR 2 - EVR 40



EVR is a direct or servo operated solenoid valve for liquid, suction, and hot gas lines with HCFC and HFC refrigerants.

EVR valves are supplied complete or as separate components, i.e. valve body, coil and flanges, if required, can be ordered separately.

Features

- A complete range of solenoid valves for refrigeration, freezing and air conditioning systems
- Normally closed (NC) and normally open (NO) versions available
- AC and DC coils are interchangeable on all valve body versions
- Use with any fluorinated refrigerant
- Designed for media temperatures up to 220 °F
- Flare connections up to $\frac{5}{8}$ in
- Solder connections up to 2 $\frac{1}{8}$ in
- Solder versions have extended connections; there is no need to dismantle the valve when soldering

Approvals

UL listed, file MH 7648

Note:

These approvals are only recognized when one of the EVR series of solenoid valves found in this leaflet is combined with a GP general purpose coil.

Table of contents

Technical data.....2
 Rated capacity [kW]3
 Ordering4
 Capacity, Liquid8
 Capacity, Suction vapor..... 10
 Capacity, Hot gas..... 13
 Identification..... 16
 Design / Function..... 18
 Dimensions and weights..... 20
 Spare parts..... 25

Technical data

Refrigerant
 R22/R407C, R404A/R507, R134a, R407A, R23.
 For other refrigerants, please contact Danfoss.

Temperature of medium: -40 – 220 °F
 Maximum 265 °F during defrosting

Maximum working pressure
 EVR 2 – EVR 8: MWP = 655 psig
 EVR 10: MWP = 500 psig
 EVR 15 – EVR 40: MWP = 460 psig

Enclosure of coil
 ~ NEMA 2 or ~ NEMA 4

Valve type	Opening differential pressure Δp [psi]			Medium temperature [°F]	Maximum working pressure MWP [psig]	C _v value ¹⁾ [gal/min]
	Minimum	Maximum (= MOPD) liquid ²⁾				
		AC	DC			
EVR 2	0.0	350	260	-40 – 220	655	0.19
EVR 3	0.0	300	260	-40 – 220	655	0.32
EVR 4	0.7	300	260	-40 – 220	655	0.66
EVR 6	0.7	300	260 ³⁾	-40 – 220	655	0.93
EVR 8	0.7	300	260	-40 – 220	655	1.3
EVR 10	0.7	300	260 ³⁾	-40 – 220	500	2.2
EVR 15	0.7	300	260 ³⁾	-40 – 220	460	3.0
EVR 18	0.7	300	260	-40 – 220	460	3.9
EVR 20	0.7	300 ⁴⁾	190	-40 – 220	460	5.8
EVR 22	0.7	300 ⁴⁾	190	-40 – 220	460	6.9
EVR 25	1.0	300	260	-40 – 220	460	12.0
EVR 32	1.0	300	260	-40 – 220	460	18.0
EVR 40	1.0	300	260	-40 – 220	460	29.0

Metric conversions
 $\frac{5}{9}(t_1\text{ °F} - 32) = t_2\text{ °C}$
 1 in = 25.4 mm

¹⁾ C_v value is the water flow in [gal/min] at a pressure drop across valve Δp = 1 psi. ρ = 10 lbs/gal

²⁾ MOPD (Max. Opening Pressure Differential) for media in gas form is approximately 14 psi greater

³⁾ EVR (NO): 300 psig

⁴⁾ EVR (NO): 275 psig

Rated capacities [TR]

	R22/R407C	R134a	R404A/R507
Liquid			
EVR 2	1.17	0.89	0.80
EVR 3	2.03	1.55	1.40
EVR 4	4.15	3.16	2.86
EVR 6	5.83	4.43	4.01
EVR 8	8.01	6.09	5.52
EVR 10	13.8	10.5	9.53
EVR 15	18.9	14.4	13.0
EVR 18	24.6	18.7	17.0
EVR 20	36.4	27.7	25.1
EVR 22	43.7	33.3	30.1
EVR 25	72.8	55.4	50.2
EVR 32	116.5	88.7	80.3
EVR 40	182.0	138.5	125.4
Suction vapour			
EVR 2	0.10	0.07	0.09
EVR 3	0.17	0.13	0.15
EVR 4	0.34	0.26	0.30
EVR 6	0.48	0.37	0.43
EVR 8	0.66	0.51	0.58
EVR 10	1.15	0.88	1.01
EVR 15	1.57	1.20	1.38
EVR 18	2.04	1.56	1.80
EVR 20	3.02	2.31	2.66
EVR 22	3.62	2.78	3.19
EVR 25	6.04	4.63	5.32
EVR 32	9.66	7.40	8.51
EVR 40	16.1	11.6	13.3
Hot gas			
EVR 2	0.22	0.18	0.17
EVR 3	0.38	0.31	0.30
EVR 4	0.77	0.63	0.62
EVR 6	1.08	0.88	0.87
EVR 8	1.49	1.21	1.19
EVR 10	2.57	2.10	2.06
EVR 15	3.52	2.87	2.82
EVR 18	4.57	3.73	3.67
EVR 20	6.76	5.51	5.43
EVR 22	8.11	6.62	6.52
EVR 25	13.5	11.0	10.9
EVR 32	21.6	17.7	17.4
EVR 40	33.8	27.6	27.2


Metric conversions
 1 psi = 0.07 bar
 $\frac{5}{9}(t_1 \text{ } ^\circ\text{F} - 32) = t_2 \text{ } ^\circ\text{C}$
 1 TR = 3.5 kW
 1 in = 25.4 mm
 US gal/min = 0.86 m³/h

¹⁾ Rated liquid and suction vapor capacity are based on:
 Evaporating temperature $t_e = 40 \text{ } ^\circ\text{F}$
 Liquid temperature ahead of valve $t_l = 100 \text{ } ^\circ\text{F}$
 Pressure drop Δp across valve
 – with liquid $\Delta p = 3 \text{ psi}$
 – with suction vapor $\Delta p = 1 \text{ psi}$ (EVR 25, 32, 40 = 2 psi)

Rated hot gas capacity is based on:
 – Condensing temperature $t_c = 100 \text{ } ^\circ\text{F}$
 – Hot gas temperature $t_h = 140 \text{ } ^\circ\text{F}$
 – Pressure drop across valve $\Delta p = 3 \text{ psi}$

Ordering


EVR solder ODF connections, Normally Closed (NC) - separate valve bodies

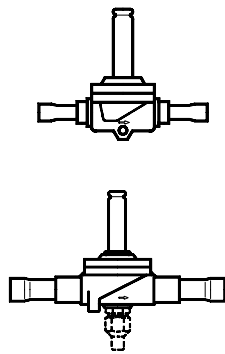

	Connection [in]	Port size [in]	Manual stem	C _v value [gal/min]	Code nos. valve body excl. coil
EVR 2	1/4	3/32	No	0.19	032F7100
EVR 3	1/4	1/8	No	0.32	032F7105
	3/8	1/8	No	0.32	032F1157
EVR 4	3/8	5/32	No	0.66	032F7110
EVR 6	3/8	15/64	No	0.93	032F7115
	3/8	15/64	Yes	0.93	032F7116
	1/2	15/64	No	0.93	032F1162
	1/2	15/64	No	0.93	032F7144
	5/8	15/64	No	0.93	032F7117
EVR 8	1/2	5/16	No	1.3	032F7121
	1/2	5/16	Yes	1.3	032F7148
	5/8	5/16	No	1.3	032F7122
EVR 10	3/8	3/8	No	2.2	032F7125
	1/2	3/8	No	2.2	032F1166
	1/2	3/8	Yes	2.2	032F1188
	5/8	3/8	No	2.2	032F1168
	5/8	3/8	Yes	2.2	032F7149
EVR 15	5/8	9/16	No	3.0	032F1171
	5/8	9/16	Yes	3.0	032F1172
	7/8	9/16	No	3.0	032F7130
EVR 18	7/8	19/32	Yes	3.9	032F1004
EVR 20	7/8	7/8	No	5.8	032F1176
	7/8	7/8	Yes	5.8	032F1177
EVR 22	1 1/8	15/16	No	6.9	032F7145
	1 1/8	15/16	Yes	6.9	032F7137
	1 3/8	15/16	No	6.9	032F7146


Metric conversions
 1 psi = 0.07 bar
 $\frac{5}{9}(t_1 \text{ } ^\circ\text{F} - 32) = t_2 \text{ } ^\circ\text{C}$
 1 TR = 3.5 kW
 1 in = 25.4 mm
 US gal/min = 0.86 m³/h

Ordering
(continued)

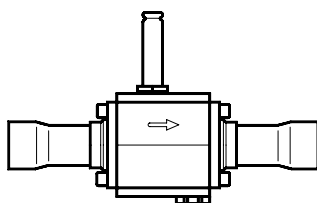EVR solder ODF connections, Normally Closed (NC) - separate valve bodies


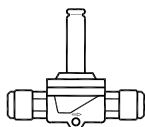
Metric conversions
 1 psi = 0.07 bar
 $\frac{5}{9}(t_1\text{ }^\circ\text{F} - 32) = t_2\text{ }^\circ\text{C}$
 1 TR = 3.5 kW
 1 in = 25.4 mm
 US gal/min = 0.86 m³/h

	Connection [in]	Port size [in]	Manual stem	C _v value [gal/min]	Code nos. valve body excl. coil
EVR 25	1 ¹ / ₈	1	No	12.0	032F1189
	1 ¹ / ₈	1	Yes	12.0	032F1190
	1 ³ / ₈	1	No	12.0	032F1193
	1 ³ / ₈	1	Yes	12.0	032F1194
EVR 32	1 ³ / ₈	7 ⁷ / ₈	No	18.0	042H1176
	1 ³ / ₈	7 ⁷ / ₈	Yes	18.0	042H1177
	1 ⁵ / ₈	7 ⁷ / ₈	No	18.0	042H1178
	1 ⁵ / ₈	7 ⁷ / ₈	Yes	18.0	042H1179
	2 ¹ / ₈	7 ⁷ / ₈	No	18.0	042H1180
	2 ¹ / ₈	7 ⁷ / ₈	Yes	18.0	042H1181
EVR 40	2 ¹ / ₈	1	Yes	29.0	042H1188

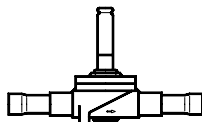EVR solder ODF connections, Normally Open (NO) - separate valve bodies


Metric conversions
 1 psi = 0.07 bar
 $\frac{5}{9}(t_1\text{ }^\circ\text{F} - 32) = t_2\text{ }^\circ\text{C}$
 1 TR = 3.5 kW
 1 in = 25.4 mm
 US gal/min = 0.86 m³/h

	Connection [in]	Port size [in]	C _v value [gal/min]	Code nos. valve body excl. coil
EVR 6	3 ³ / ₈	1 ¹ / ₄	0.93	032F1164
EVR 10	1 ¹ / ₂	3 ³ / ₈	2.2	032F1169
EVR 15	5 ⁵ / ₈	9 ⁹ / ₁₆	3.0	032F1174

EVR flare connections, Normally Closed (NC) - separate valve bodies


Metric conversions
 1 psi = 0.07 bar
 $\frac{5}{9}(t_1\text{ }^\circ\text{F} - 32) = t_2\text{ }^\circ\text{C}$
 1 TR = 3.5 kW
 1 in = 25.4 mm
 US gal/min = 0.86 m³/h

	Connection [in]	Port size [in]	Manual stem	C _v value [gal/min]	Code nos. valve body excl. coil
EVR 3	1 ¹ / ₄	1 ¹ / ₈	No	0.32	032F8106
EVR 3	3 ³ / ₈	1 ¹ / ₈	No	0.32	032F8115
EVR 6	3 ³ / ₈	1 ¹⁵ / ₆₄	No	0.93	032F8071



BJ and BX coils for EVR valves



Approvals

Listed with EVR. MH7648
Low Voltage Directive (LVD) 2006/95/EC

Ordering

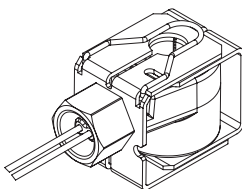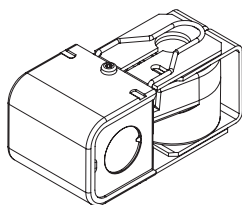

Coil type	Valve type	Wire length		Voltage [V] AC	Frequency [Hz]	Power consumption [Hz]	Code no.	
		[in]	[cm]					
Junction box NEMA 2								
BJ024CS	AKV / EVR EVRH / EVRA EVRAT / EVRS EVRST / EVM	7	18	24	50 / 60	14	018F4100	
BJ120CS	EV220B 6-50 EV210B EV215B	7	18	110 120	50 / 60 60	16 15	018F4110	
BJ240CS	EV225B EV250B	7	18	208 – 240 230	60 50	14 17	018F4120	
BJ120BS	AKVH / EVRH	7	18	120	60	16	018F4130	
BJ208BS		7	18	208	60	16	018F4132	
BJ240BS		7	18	240	60	16	018F4134	
Conduit boss NEMA 4								
BX024CS	AKV / EVR EVRH / EVRA EVRAT / EVRS EVRST / EVM EV220B 6-50 EV210B EV215B EV225B EV250B	18	46	24	50 / 60	14	018F4102	
BX024CS		71	180	24	50 / 60	14	018F4103	
BX024CS		98	250	24	50 / 60	14	018F4104	
BX120CS		18	46	110 120	50 / 60 60	16 15	018F4112	
BX120CS		36	91				018F4113	
BX120CS		71	180				018F4114	
BX120CS		98	250	208 – 240 230	60 50	14 17	018F4115	
BX240CS		18	46				018F4122	
BX240CS		98	250	018F4123				
BX120BS		AKVH / EVRH	98	250	120	60	16	018F4131
BX208BS			98	250	208	60	16	018F4133
BX240BS			98	250	240	60	16	018F4135

Technical data

Design

In accordance with UL 429

Power supply

Alternating current (AC)

Permissible voltage variation

Alternating current (AC):
50 Hz and 60 Hz: -10% – +15%
50/60 Hz: +/- 10%

Power consumption

Alternating current (AC): Inrush: 49 VA;
Holding: 28 VA. 16 W

Insulation of coil wire

Class H according to IEC 85

Connection

Junction box or Conduit boss

Enclosure. IEC 60529

Junction box NEMA 2 ~ IP 12–32
Conduit boss NEMA 4 ~ IP 54

Ambient temperature

-40 °F – 122 °F (-40 °C – 50 °C)


BG coils for EVR valves
(continued)

Features

- For high temperatures – class H insulated wire
- Encapsulated coils with long life time
- Wide range of coils
 - from 12 V – 200 V DC
 - with terminal box IP67 ~ NEMA 6

Approvals

Low Voltage Directive (LVD) 2006/95/EC

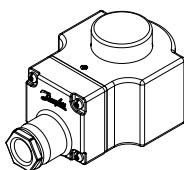Ordering


Valve type	Voltage [V] DC	Power consumption [W]	Code no.
EVR 2 to 15 (NC)	12	20	018F6856
EVR 25 to 40 (NC/NO)	24	20	018F6857
EVR 6 to 15 (NO)	48	20	018F6859
EVRC 10 to 15	110	20	018F6860
EVRA 3 to 15 (NC)	115	20	018F6861
EVRA 25 to 40 (NC)	220	20	018F6851
EVRAT 10 to 15 (NC)	12	20	018F6886
EVR5/EVRST 3 to 15	24	20	018F6887
EVM (NC/NO)	48	20	018F6889
EVR 20 to 22 (NC/NO)	110	20	018F6890
EVRC 20	220	20	018F6881
EVRA 20			
EVRAT 20			
EVRST 20			

Technical data

Design
In accordance with VDE 0580

Connection
Terminal box

Power supply
Direct current (DC)

Enclosure. IEC 529
IP 67 NEMA 6

Permissible voltage variation
-10 – 15%

Ambient temperature
-40 °F – 122 °F (-40 °C – 50 °C)

Power consumption
20 W

Insulation of coil wire
Class H according to IEC 85

**Capacity
Liquid**

Type	Liquid capacity Q_0 [TR] at a pressure drop across valve Δp [psi]						
	1	2	3	4	5	6	7

R22/R407C

EVR 2	0.58	0.82	1.01	1.16	1.30	1.43	1.54
EVR 3	0.98	1.39	1.70	1.97	2.20	2.41	2.60
EVR 4	2.04	2.88	3.53	4.08	4.56	4.99	5.39
EVR 6	2.91	4.12	5.04	5.82	6.51	7.13	7.71
EVR 8	4.08	5.77	7.06	8.15	9.12	9.99	10.79
EVR 10	6.92	9.78	11.98	13.83	15.47	16.94	18.30
EVR 15	9.46	13.39	16.39	18.93	21.16	23.18	25.04
EVR 18	12.38	17.50	21.44	24.75	27.68	30.32	32.75
EVR 20	18.20	25.74	31.53	36.40	40.70	44.59	48.16
EVR 22	21.84	30.89	37.83	43.68	48.84	53.50	57.79
EVR 25	0.28	34.15	63.05	72.81	81.40	89.17	96.31
EVR 32	0.44	54.63	100.88	116.49	130.24	142.67	154.10
EVR 40	0.67	85.35	157.63	182.02	203.50	222.93	240.79

R134a

EVR 2	0.54	0.77	0.94	1.09	1.22	1.33	1.44
EVR 3	0.92	1.30	1.59	1.84	2.05	2.25	2.43
EVR 4	1.90	2.69	3.30	3.81	4.26	4.66	5.04
EVR 6	2.72	3.85	4.71	5.44	6.08	6.66	7.20
EVR 8	3.81	5.38	6.59	7.61	8.51	9.33	10.07
EVR 10	6.46	9.13	11.19	12.92	14.44	15.82	17.09
EVR 15	8.84	12.50	15.31	17.68	19.76	21.65	23.38
EVR 18	11.56	16.35	20.02	23.12	25.84	28.31	30.58
EVR 20	17.00	24.04	29.44	33.99	38.01	41.63	44.97
EVR 22	20.40	28.84	35.33	40.79	45.61	49.96	53.96
EVR 25	0.26	31.89	58.88	67.99	76.01	83.27	89.94
EVR 32	0.41	51.02	94.21	108.78	121.62	133.23	143.90
EVR 40	0.63	79.70	147.20	169.97	190.03	208.17	224.85

Capacities are based on:
Liquid temperature $t_l = 100$ °F
Evaporating temperature $t_e = 40$ °F
Superheat temperature ($t_e + 10$ °F) = 50 °F

Metric conversions
1 psi = 0.07 bar
 $\frac{5}{9}(t_1 \text{ °F} - 32) = t_2 \text{ °C}$
1 TR = 3.5 kW

Correction factors

When liquid temperature t_l ahead of the expansion valve is other than 100 °F, adjust the table capacities by multiplying them by the appropriate correction factor found in the following table.

Correction factors for liquid temperature t_l

t_l [°F]	80	90	100	110	120
Factor	1.10	1.05	1.00	0.95	0.90

**Capacity
Liquid**
(continued)

Type	Liquid capacity Q_0 [TR] at a pressure drop across valve Δp [psi]						
	1	2	3	4	5	6	7

R404A and R507

EVR 2	0.38	0.54	0.66	0.77	0.86	0.94	1.01
EVR 3	0.65	0.91	1.12	1.29	1.45	1.58	1.71
EVR 4	1.34	1.90	2.32	2.68	3.00	3.28	3.55
EVR 6	1.92	2.71	3.32	3.83	4.28	4.69	5.07
EVR 8	2.68	3.79	4.65	5.36	6.00	6.57	7.10
EVR 10	4.55	6.43	7.88	9.10	10.17	11.14	12.04
EVR 15	6.23	8.80	10.78	12.45	13.92	15.25	16.47
EVR 18	8.14	11.51	14.10	16.28	18.20	19.94	21.54
EVR 20	11.97	16.93	20.74	23.94	26.77	29.33	31.68
EVR 22	14.37	20.32	24.88	28.73	32.13	35.19	38.01
EVR 25	0.28	22.46	41.47	47.89	53.54	58.65	63.35
EVR 32	0.44	35.94	66.36	76.62	85.67	93.84	101.36
EVR 40	0.67	56.14	103.68	119.72	133.86	146.63	158.38

Capacities are based on:
Liquid temperature $t_l = 100$ °F
Evaporating temperature $t_e = 40$ °F
Superheat temperature ($t_e + 10$ °F) = 50 °F

Metric conversions
1 psi = 0.07 bar
 $\frac{5}{9}(t_1 \text{ °F} - 32) = t_2 \text{ °C}$
1 TR = 3.5 kW

Correction factors

When liquid temperature t_l ahead of the expansion valve is other than 100 °F, adjust the table capacities by multiplying them by the appropriate correction factor found in the following table.

Correction factors for liquid temperature t_l

t_l [°F]	80	90	100	110	120
Factor	1.10	1.05	1.00	0.95	0.90

Capacity
Suction vapor

Type	Pressure drop across valve Δp [psi]	Suction vapor capacity Q_0 [TR] at evaporating temperature t_e [°F]							
		-40	-20	0	10	20	30	40	50
R22/R407C									
EVR 2	1	0.03	0.04	0.05	0.06	0.07	0.08	0.08	0.09
	2	0.04	0.06	0.08	0.08	0.09	0.11	0.12	0.13
	3	0.05	0.07	0.09	0.10	0.11	0.13	0.14	0.16
EVR 3	1	0.05	0.07	0.09	0.10	0.11	0.13	0.14	0.15
	2	0.07	0.10	0.13	0.14	0.16	0.18	0.20	0.22
	3	0.09	0.12	0.15	0.17	0.19	0.22	0.24	0.26
EVR 4	1	0.11	0.15	0.19	0.21	0.24	0.26	0.29	0.32
	2	0.15	0.20	0.26	0.30	0.33	0.37	0.41	0.45
	3	0.18	0.24	0.32	0.36	0.40	0.45	0.50	0.55
EVR 6	1	0.16	0.21	0.27	0.30	0.34	0.38	0.42	0.46
	2	0.22	0.29	0.38	0.42	0.47	0.53	0.58	0.64
	3	0.25	0.35	0.45	0.51	0.57	0.64	0.71	0.78
EVR 8	1	0.22	0.29	0.38	0.42	0.47	0.53	0.58	0.64
	2	0.30	0.41	0.53	0.59	0.66	0.74	0.82	0.90
	3	0.35	0.49	0.63	0.72	0.80	0.90	0.99	1.10
EVR 10	1	0.38	0.50	0.64	0.72	0.80	0.89	0.99	1.09
	2	0.51	0.69	0.89	1.00	1.12	1.25	1.39	1.53
	3	0.60	0.82	1.08	1.22	1.36	1.52	1.69	1.86
EVR 15	1	0.52	0.68	0.88	0.98	1.10	1.22	1.35	1.49
	2	0.70	0.94	1.22	1.38	1.54	1.71	1.90	2.09
	3	0.82	1.13	1.47	1.66	1.87	2.08	2.31	2.55
EVR 18	1	0.68	0.89	1.15	1.29	1.44	1.60	1.77	1.94
	2	0.92	1.23	1.60	1.80	2.01	2.24	2.48	2.73
	3	1.08	1.47	1.93	2.18	2.44	2.72	3.02	3.33
EVR 20	1	0.99	1.31	1.69	1.89	2.11	2.35	2.60	2.86
	2	1.35	1.81	2.35	2.64	2.96	3.29	3.65	4.02
	3	1.58	2.17	2.83	3.20	3.59	4.00	4.44	4.90
EVR 22	1	1.19	1.58	2.02	2.27	2.54	2.82	3.12	3.43
	2	1.62	2.18	2.82	3.17	3.55	3.95	4.38	4.83
	3	1.90	2.60	3.40	3.84	4.30	4.80	5.32	5.88
EVR 25	1	0.01	0.02	0.02	0.03	0.03	0.03	0.04	0.04
	2	1.72	2.35	3.07	3.47	3.89	4.34	4.81	5.31
	3	3.17	4.34	5.67	6.40	7.17	8.00	8.87	9.79
EVR 32	1	0.02	0.03	0.04	0.04	0.05	0.06	0.06	0.07
	2	2.76	3.77	4.92	5.55	6.22	6.94	7.69	8.49
	3	5.07	6.94	9.07	10.24	11.48	12.80	14.19	15.67
EVR 40	1	0.03	0.05	0.06	0.07	0.08	0.09	0.09	0.10
	2	4.31	5.88	7.68	8.67	9.72	10.84	12.02	13.26
	3	7.92	10.84	14.17	15.99	17.94	20.00	22.18	24.48

Metric conversions
 1 psi = 0.07 bar
 $\frac{5}{9}(t_1 \text{ } ^\circ\text{F} - 32) = t_2 \text{ } ^\circ\text{C}$
 1 TR = 3.5 kW

Correction factors
 When liquid temperature t_l ahead of the expansion valve is other than 100 °F, adjust the table capacities by multiplying them by the appropriate correction factor found in the following table.

The table values refer to evaporator capacity and are given as a function of evaporating temperature t_e and pressure drop Δp across the valve. Capacities are based on liquid temperature $t_l = 100$ °F ahead of the expansion valve and superheat $t_s = 7$ °F. For each additional 10 °F of superheat, the table capacities must be reduced by 2%.

Correction factors for liquid temperature t_l

t_l [°F]	80	90	100	110	120
Factor	1.10	1.05	1.00	0.95	0.90

**Capacity
Suction vapor**
(continued)

Type	Pressure drop across valve Δp [psi]	Suction vapor capacity Q_0 [TR] at evaporating temperature t_e [°F]							
		-40	-20	0	10	20	30	40	50

R134a

EVR 2	1	0.02	0.03	0.04	0.04	0.05	0.06	0.06	0.07
	2	0.02	0.04	0.05	0.06	0.07	0.08	0.09	0.10
	3	0.03	0.04	0.06	0.07	0.08	0.09	0.11	0.12
EVR 3	1	0.03	0.05	0.06	0.07	0.08	0.09	0.11	0.12
	2	0.04	0.06	0.09	0.10	0.12	0.13	0.15	0.17
	3	0.05	0.07	0.10	0.12	0.14	0.16	0.18	0.20
EVR 4	1	0.07	0.10	0.13	0.15	0.17	0.20	0.22	0.25
	2	0.09	0.13	0.18	0.21	0.24	0.27	0.31	0.35
	3	0.10	0.15	0.21	0.25	0.29	0.33	0.38	0.42
EVR 6	1	0.10	0.14	0.19	0.22	0.25	0.28	0.32	0.36
	2	0.12	0.19	0.26	0.30	0.34	0.39	0.44	0.50
	3	0.14	0.22	0.31	0.36	0.41	0.47	0.54	0.60
EVR 8	1	0.14	0.19	0.26	0.30	0.35	0.39	0.44	0.50
	2	0.17	0.26	0.36	0.42	0.48	0.55	0.62	0.70
	3	0.19	0.30	0.43	0.50	0.58	0.66	0.75	0.85
EVR 10	1	0.23	0.33	0.45	0.51	0.59	0.67	0.75	0.85
	2	0.30	0.44	0.61	0.71	0.82	0.93	1.05	1.19
	3	0.33	0.51	0.73	0.85	0.98	1.12	1.27	1.44
EVR 15	1	0.32	0.45	0.61	0.70	0.80	0.91	1.03	1.16
	2	0.41	0.60	0.84	0.97	1.12	1.27	1.44	1.62
	3	0.45	0.70	1.00	1.16	1.34	1.53	1.74	1.97
EVR 18	1	0.41	0.59	0.80	0.92	1.05	1.20	1.35	1.52
	2	0.53	0.79	1.10	1.27	1.46	1.66	1.88	2.12
	3	0.58	0.92	1.30	1.52	1.75	2.01	2.28	2.57
EVR 20	1	0.61	0.87	1.18	1.35	1.55	1.76	1.98	2.23
	2	0.78	1.16	1.61	1.87	2.15	2.45	2.77	3.12
	3	0.86	1.35	1.92	2.23	2.58	2.95	3.35	3.78
EVR 22	1	0.73	1.04	1.41	1.63	1.86	2.11	2.38	2.67
	2	0.93	1.39	1.94	2.24	2.58	2.94	3.32	3.74
	3	1.03	1.62	2.30	2.68	3.09	3.54	4.02	4.54
EVR 25	1	0.01	0.01	0.02	0.02	0.02	0.03	0.03	0.03
	2	0.94	1.47	2.08	2.43	2.80	3.20	3.63	4.10
	3	1.71	2.69	3.83	4.47	5.16	5.90	6.70	7.56
EVR 32	1	0.01	0.02	0.03	0.03	0.04	0.04	0.05	0.05
	2	1.50	2.35	3.33	3.88	4.48	5.12	5.81	6.56
	3	2.74	4.31	6.13	7.15	8.25	9.44	10.72	12.10
EVR 40	1	0.02	0.03	0.04	0.05	0.06	0.06	0.07	0.08
	2	2.35	3.66	5.20	6.06	7.00	8.00	9.08	10.24
	3	4.28	6.73	9.58	11.17	12.90	14.75	16.75	18.90

Metric conversions
 1 psi = 0.07 bar
 $\frac{5}{9}(t_1 \text{ °F} - 32) = t_2 \text{ °C}$
 1 TR = 3.5 kW

Correction factors
 When liquid temperature t_l ahead of the expansion valve is other than 100 °F, adjust the table capacities by multiplying them by the appropriate correction factor found in the following table.

The table values refer to evaporator capacity and are given as a function of evaporating temperature t_e and pressure drop D_p across the valve. Capacities are based on liquid temperature $t_l = 100 \text{ °F}$ ahead of the expansion valve and superheat $t_s = 7 \text{ °F}$. For each additional 10 °F of superheat, the table capacities must be reduced by 2%.

Correction factors for liquid temperature t_l

t_l [°F]	80	90	100	110	120
Factor	1.10	1.05	1.00	0.95	0.90

**Capacity
Suction vapor**
(continued)

Type	Pressure drop across valve Δp [psi]	Suction vapor capacity Q_0 [TR] at evaporating temperature t_e [°F]							
		-40	-20	0	10	20	30	40	50

R404A and R507

EVR 2	1	0.02	0.03	0.04	0.05	0.06	0.06	0.07	0.08
	2	0.03	0.05	0.06	0.07	0.08	0.09	0.10	0.11
	3	0.04	0.05	0.07	0.08	0.09	0.11	0.12	0.13
EVR 3	1	0.04	0.06	0.07	0.08	0.09	0.11	0.12	0.13
	2	0.06	0.08	0.10	0.12	0.13	0.15	0.17	0.19
	3	0.07	0.09	0.12	0.14	0.16	0.18	0.20	0.23
EVR 4	1	0.08	0.11	0.15	0.17	0.20	0.22	0.25	0.27
	2	0.11	0.16	0.21	0.24	0.27	0.31	0.35	0.39
	3	0.14	0.19	0.26	0.29	0.33	0.38	0.42	0.47
EVR 6	1	0.12	0.16	0.22	0.25	0.28	0.31	0.35	0.39
	2	0.16	0.23	0.30	0.34	0.39	0.44	0.49	0.55
	3	0.19	0.27	0.37	0.42	0.47	0.54	0.60	0.67
EVR 8	1	0.17	0.23	0.30	0.34	0.39	0.44	0.49	0.55
	2	0.23	0.32	0.42	0.48	0.55	0.62	0.69	0.77
	3	0.27	0.38	0.51	0.58	0.66	0.75	0.84	0.94
EVR 10	1	0.28	0.39	0.51	0.59	0.66	0.75	0.83	0.93
	2	0.39	0.54	0.72	0.82	0.93	1.05	1.17	1.31
	3	0.46	0.65	0.87	0.99	1.13	1.27	1.43	1.60
EVR 15	1	0.39	0.53	0.70	0.80	0.91	1.02	1.14	1.27
	2	0.53	0.74	0.98	1.12	1.27	1.43	1.61	1.79
	3	0.63	0.89	1.19	1.36	1.54	1.74	1.96	2.19
EVR 18	1	0.51	0.70	0.92	1.05	1.18	1.33	1.49	1.67
	2	0.70	0.96	1.28	1.47	1.66	1.87	2.10	2.35
	3	0.82	1.16	1.55	1.78	2.02	2.28	2.56	2.86
EVR 20	1	0.75	1.02	1.35	1.54	1.74	1.96	2.20	2.45
	2	1.03	1.42	1.89	2.15	2.44	2.75	3.09	3.45
	3	1.21	1.70	2.28	2.61	2.97	3.35	3.76	4.20
EVR 22	1	0.90	1.23	1.62	1.85	2.09	2.35	2.64	2.94
	2	1.23	1.70	2.27	2.59	2.93	3.31	3.71	4.14
	3	1.46	2.04	2.74	3.13	3.56	4.02	4.51	5.05
EVR 25	1	0.01	0.01	0.02	0.02	0.03	0.03	0.03	0.04
	2	1.32	1.85	2.48	2.83	3.22	3.63	4.08	4.56
	3	2.43	3.40	4.57	5.22	5.93	6.70	7.52	8.41
EVR 32	1	0.02	0.02	0.03	0.04	0.04	0.05	0.05	0.06
	2	2.11	2.96	3.96	4.53	5.15	5.81	6.52	7.29
	3	3.88	5.45	7.31	8.36	9.49	10.72	12.04	13.45
EVR 40	1	0.03	0.04	0.05	0.06	0.06	0.07	0.08	0.09
	2	3.30	4.62	6.19	7.08	8.04	9.07	10.19	11.39
	3	6.06	8.51	11.42	13.06	14.83	16.75	18.81	21.02

Metric conversions
 1 psi = 0.07 bar
 $\frac{5}{9}(t_1 \text{ °F} - 32) = t_2 \text{ °C}$
 1 TR = 3.5 kW

Correction factors
 When liquid temperature t_l ahead of the expansion valve is other than 100 °F, adjust the table capacities by multiplying them by the appropriate correction factor found in the following table.

The table values refer to evaporator capacity and are given as a function of evaporating temperature t_e and pressure drop Δp across the valve. Capacities are based on liquid temperature $t_l = 100 \text{ °F}$ ahead of the expansion valve and superheat $t_s = 7 \text{ °F}$. For each additional 10 °F of superheat, the table capacities must be reduced by 2%.

Correction factors for liquid temperature t_l

t_l [°F]	80	90	100	110	120
Factor	1.10	1.05	1.00	0.90	0.90

**Capacity
Hot gas**

Type	Pressure drop across valve Δp [psi]	Hot gas capacity Q_h [TR]								
		Evaporating temp. $t_e = 40^\circ\text{F}$, hot gas temp. $t_h = t_c + 40^\circ\text{F}$, subcooling $\Delta t_u = 10^\circ\text{F}$								
		R22/R407C			R134a			R404A/R507		
		Condensing temp. t_c [$^\circ\text{F}$]			Condensing temp. t_c [$^\circ\text{F}$]			Condensing temp. t_c [$^\circ\text{F}$]		
		70	100	140	70	100	140	70	100	140
EVR 2	2	0.15	0.16	0.17	0.12	0.14	0.14	0.14	0.14	0.13
	5	0.24	0.26	0.27	0.19	0.21	0.22	0.22	0.23	0.21
	10	0.33	0.36	0.38	0.26	0.29	0.30	0.31	0.32	0.29
	15	0.39	0.43	0.46	0.31	0.35	0.37	0.37	0.38	0.35
	20	0.44	0.49	0.52	0.34	0.39	0.42	0.42	0.44	0.40
	25	0.48	0.54	0.58	0.36	0.43	0.46	0.46	0.48	0.44
EVR 3	2	0.26	0.28	0.29	0.21	0.23	0.23	0.24	0.24	0.22
	5	0.40	0.43	0.45	0.32	0.36	0.37	0.38	0.38	0.35
	10	0.55	0.61	0.64	0.44	0.49	0.51	0.52	0.53	0.49
	15	0.66	0.73	0.77	0.52	0.59	0.62	0.62	0.65	0.59
	20	0.74	0.83	0.88	0.57	0.66	0.70	0.71	0.74	0.68
	25	0.81	0.91	0.98	0.61	0.72	0.78	0.77	0.81	0.75
EVR 4	2	0.53	0.57	0.60	0.44	0.47	0.49	0.50	0.51	0.46
	5	0.83	0.90	0.94	0.67	0.74	0.76	0.78	0.79	0.72
	10	1.14	1.26	1.32	0.92	1.02	1.06	1.08	1.11	1.01
	15	1.37	1.52	1.60	1.08	1.22	1.28	1.30	1.34	1.22
	20	1.54	1.72	1.83	1.19	1.37	1.46	1.47	1.53	1.40
	25	1.68	1.90	2.03	1.27	1.49	1.61	1.60	1.68	1.56
EVR 6	2	0.76	0.82	0.86	0.62	0.68	0.69	0.71	0.72	0.65
	5	1.18	1.29	1.35	0.96	1.05	1.09	1.11	1.13	1.03
	10	1.63	1.79	1.89	1.31	1.46	1.52	1.54	1.58	1.44
	15	1.95	2.16	2.29	1.54	1.74	1.83	1.85	1.91	1.75
	20	2.20	2.46	2.62	1.70	1.96	2.09	2.09	2.18	2.00
	25	2.40	2.71	2.90	1.82	2.13	2.30	2.29	2.41	2.22

Metric conversions
 1 psi = 0.07 bar
 $\frac{5}{9}(t_1^\circ\text{F} - 32) = t_2^\circ\text{C}$
 1 TR = 3.5 kW

Correction factors

The table values refer to hot gas capacity and are given as a function of condensing temperature t_c and pressure drop Δp across the valve. Capacities are based on a hot gas temperature superheated 40°F above condensing temperature ($t_h = t_c + 40^\circ\text{F}$).

For each additional 10°F of superheat above 40°F , the table capacities must be reduced by 1%. When the valve is used in a hot gas defrost circuit, evaporator temperature affects the capacity. When the evaporator temperature differs from 40°F , adjust the table capacities by multiplying them by the appropriate correction factor found in the following table.

Correction factors for t_h and t_e

t_e [$^\circ\text{F}$]	-40	-20	0	20	40	50
Factor	1.18	1.14	1.09	1.04	1	0.97

**Capacity
Hot gas**
(continued)

Type	Pressure drop across valve Δp [psi]	Hot gas capacity Q_h [TR]								
		Evaporating temp. $t_e = 40^\circ\text{F}$, hot gas temp. $t_h = t_e + 40^\circ\text{F}$, subcooling $\Delta t_u = 10^\circ\text{F}$								
		R22/R407C			R134a			R404A/R507		
		Condensing temp. t_c [$^\circ\text{F}$]			Condensing temp. t_c [$^\circ\text{F}$]			Condensing temp. t_c [$^\circ\text{F}$]		
		70	100	140	70	100	140	70	100	140
EVR 8	2	1.06	1.15	1.20	0.87	0.95	0.97	1.00	1.01	0.91
	5	1.65	1.80	1.88	1.35	1.48	1.52	1.56	1.59	1.44
	10	2.29	2.51	2.64	1.83	2.04	2.12	2.16	2.22	2.01
	15	2.74	3.03	3.21	2.15	2.43	2.57	2.59	2.68	2.45
	20	3.08	3.45	3.67	2.38	2.74	2.92	2.93	3.05	2.81
	25	3.36	3.80	4.07	2.54	2.99	3.22	3.21	3.37	3.11
EVR 10	2	1.80	1.95	2.03	1.48	1.61	1.65	1.69	1.72	1.55
	5	2.81	3.06	3.19	2.29	2.50	2.58	2.64	2.69	2.44
	10	3.88	4.26	4.48	3.11	3.46	3.60	3.66	3.76	3.42
	15	4.64	5.14	5.44	3.65	4.13	4.35	4.40	4.55	4.15
	20	5.23	5.85	6.23	4.03	4.65	4.96	4.97	5.18	4.76
	25	5.71	6.44	6.90	4.31	5.07	5.47	5.44	5.72	5.28
EVR 15	2	2.46	2.67	2.78	2.02	2.20	2.25	2.31	2.35	2.12
	5	3.84	4.18	4.37	3.13	3.43	3.53	3.62	3.69	3.33
	10	5.31	5.83	6.13	4.25	4.73	4.93	5.01	5.15	4.68
	15	6.35	7.03	7.44	4.99	5.65	5.96	6.02	6.22	5.68
	20	7.16	8.00	8.52	5.52	6.36	6.79	6.81	7.09	6.51
	25	7.81	8.81	9.44	5.90	6.93	7.48	7.45	7.82	7.23
EVR 18	2	3.22	3.49	3.63	2.65	2.87	2.95	3.03	3.07	2.77
	5	5.02	5.47	5.72	4.09	4.48	4.62	4.73	4.82	4.36
	10	6.94	7.62	8.02	5.56	6.18	6.45	6.56	6.73	6.12
	15	8.30	9.20	9.73	6.53	7.39	7.79	7.87	8.14	7.43
	20	9.36	10.46	11.14	7.22	8.32	8.87	8.90	9.27	8.52
	25	10.21	11.52	12.34	7.71	9.06	9.78	9.74	10.23	9.45

Metric conversions
 1 psi = 0.07 bar
 $\frac{5}{9}(t_1^\circ\text{F} - 32) = t_2^\circ\text{C}$
 1 TR = 3.5 kW

Correction factors

The table values refer to hot gas capacity and are given as a function of condensing temperature t_c and pressure drop Δp across the valve. Capacities are based on a hot gas temperature superheated 40°F above condensing temperature ($t_h = t_c + 40^\circ\text{F}$). For each additional 10°F of superheat above 40°F , the table capacities must be reduced by 1%.

When the valve is used in a hot gas defrost circuit, evaporator temperature affects the capacity. When the evaporator temperature differs from 40°F , adjust the table capacities by multiplying them by the appropriate correction factor found in the following table.

Correction factors for t_h and t_e

t_e [$^\circ\text{F}$]	-40	-20	0	20	40	50
Factor	1.18	1.14	1.09	1.04	1	0.97

**Capacity
Hot gas**
(continued)

Type	Pressure drop across valve Δp [psi]	Hot gas capacity Q_h [TR]								
		Evaporating temp. $t_e = 40^\circ\text{F}$, hot gas temp. $t_h = t_e + 40^\circ\text{F}$, subcooling $\Delta t_u = 10^\circ\text{F}$								
		R22/R407C			R134a			R404A/R507		
		Condensing temp. t_c [°F]			Condensing temp. t_c [°F]			Condensing temp. t_c [°F]		
		70	100	140	70	100	140	70	100	140
EVR 20	2	4.73	5.13	5.34	3.89	4.23	4.33	4.45	4.52	4.07
	5	7.39	8.04	8.41	6.01	6.59	6.80	6.95	7.09	6.41
	10	10.21	11.21	11.79	8.17	9.09	9.48	9.64	9.90	8.99
	15	12.21	13.53	14.31	9.60	10.87	11.46	11.57	11.96	10.93
	20	13.77	15.39	16.38	10.62	12.23	13.05	13.09	13.63	12.53
	25	15.02	16.94	18.15	11.34	13.33	14.39	14.33	15.04	13.90
EVR 22	2	5.68	6.16	6.41	4.67	5.07	5.20	5.34	5.42	4.89
	5	8.86	9.65	10.09	7.22	7.90	8.16	8.35	8.50	7.69
	10	12.25	13.45	14.14	9.81	10.91	11.38	11.57	11.87	10.79
	15	14.65	16.23	17.17	11.52	13.04	13.75	13.89	14.36	13.12
	20	16.52	18.47	19.66	12.74	14.68	15.66	15.71	16.36	15.03
	25	18.02	20.33	21.79	13.61	15.99	17.26	17.19	18.05	16.67
EVR 25	2	6.26	6.79	7.08	5.13	5.58	5.74	5.88	5.98	5.39
	5	14.77	16.09	16.81	12.03	13.17	13.59	13.91	14.17	12.82
	10	20.42	22.42	23.57	16.34	18.19	18.97	19.28	19.79	17.99
	15	24.42	27.06	28.62	19.20	21.73	22.92	23.14	23.93	21.86
	20	27.53	30.78	32.76	21.23	24.47	26.10	26.18	27.27	25.05
	25	30.04	33.89	36.31	22.69	26.66	28.77	28.66	30.08	27.79
EVR 32	2	10.01	10.86	11.33	8.20	8.93	9.17	9.41	9.56	8.63
	5	23.63	25.74	26.90	19.24	21.08	21.75	22.25	22.68	20.51
	10	32.66	35.87	37.72	26.15	29.10	30.35	30.85	31.67	28.78
	15	39.08	43.29	45.80	30.72	34.77	36.66	37.03	38.28	34.98
	20	44.05	49.24	52.42	33.97	39.15	41.76	41.89	43.63	40.08
	25	48.06	54.22	58.09	36.30	42.65	46.04	45.85	48.14	44.46
EVR 40	2	15.63	16.97	17.69	12.82	13.95	14.33	14.70	14.94	13.48
	5	36.93	40.22	42.04	30.07	32.94	33.98	34.77	35.44	32.04
	10	51.04	56.05	58.94	40.86	45.47	47.42	48.21	49.48	44.97
	15	61.06	67.64	71.56	48.01	54.33	57.29	57.86	59.82	54.65
	20	68.84	76.94	81.91	53.08	61.17	65.24	65.45	68.17	62.63
	25	75.09	84.72	90.77	56.72	66.64	71.93	71.64	75.21	69.48

Metric conversions
 1 psi = 0.07 bar
 $\frac{5}{9}(t_1^\circ\text{F} - 32) = t_2^\circ\text{C}$
 1 TR = 3.5 kW

Correction factors


The table values refer to hot gas capacity and are given as a function of condensing temperature t_c and pressure drop Δp across the valve. Capacities are based on a hot gas temperature superheated 40 °F above condensing temperature ($t_h = t_c + 40^\circ\text{F}$). For each additional 10 °F of superheat above 40 °F, the table capacities must be reduced by 1%.

When the valve is used in a hot gas defrost circuit, evaporator temperature affects the capacity. When the evaporator temperature differs from 40 °F, adjust the table capacities by multiplying them by the appropriate correction factor found in the following table.

Correction factors for t_h and t_e

t_c [°F]	-40	-20	0	20	40	50
Factor	1.18	1.14	1.09	1.04	1	0.97

Identification

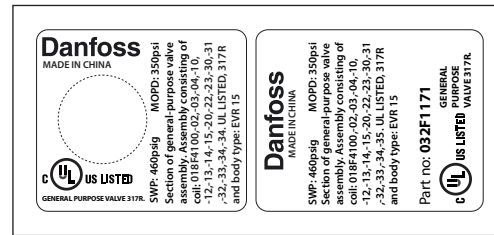

Example

EVR 8	Valve type and size
SWP	Safe Working Pressure (MWP) in psig
018F4100	Coil group for the EVR
MOPP	Maximum Operating Pressure in psi
S and A	Approvals in USA and Canada

Essential valve data is given on the label.

Valve selection example

Note:

When selecting the appropriate solenoid valve, it is easier to convert the actual required capacity to that of the rated capacities listed in the tables.

Liquid line solenoid valve selection example

Refrigerant R134a
 Condensing temperature $t_c = 100\text{ }^\circ\text{F}$
 Liquid temperature ahead of valve $t_l = 90\text{ }^\circ\text{F}$
 Maximum allowable pressure drop across valve $\Delta p = 2\text{ psi}$
 Evaporator capacity $Q_o = 10\text{ TR}$ (required valve capacity)

The table capacity should be corrected by the corresponding factor as:

$$Q_{table} \times f_{liquid} = Q_o$$

Step 1:

Determine the correction factor for liquid temperature. From the correction factor table found on page 8, a liquid temperature of $90\text{ }^\circ\text{F}$ corresponds to a factor of 1.05.

Step 2:

Correct the required valve capacity. This is done by dividing the evaporator capacity by the liquid correction factor.
 $Q_{corrected} = 10/1.05 = 9.5\text{ TR}$

Step 3:

Select the appropriate capacity table and choose the first valve whose capacity is greater than or equal to $Q_{corrected}$ at the required pressure drop. Using the R134a liquid capacity table found on page 8, the EVR 15 is selected as it has a capacity of 12.5 TR at a $\Delta p = 2\text{ psi}$.

This is done by utilizing various correction factors in the selection process. The following examples illustrate how this is done.

Suction line solenoid valve selection example

Refrigerant R134a
 Liquid temperature ahead of expansion valve $t_l = 90\text{ }^\circ\text{F}$
 Evaporator temperature $t_e = 30\text{ }^\circ\text{F}$
 Superheat ahead of valve $t_s = 17\text{ }^\circ\text{F}$
 Maximum allowable pressure drop across valve $\Delta p = 3\text{ psi}$
 Evaporator capacity $Q_o = 10\text{ TR}$ (required valve capacity)

The table capacity should be corrected by the corresponding factor as:

$$Q_{table} \times f_{liquid} \times f_{superheat} = Q_o$$

Step 1:

Determine the correction factor for superheat ahead of the valve by increasing the required valve capacity by 2% for each $10\text{ }^\circ\text{F}$ of actual superheat above the table rated value of $7\text{ }^\circ\text{F}$. In the example, a superheat of $17\text{ }^\circ\text{F}$ corresponds to a $10\text{ }^\circ\text{F}$ increase above the table value which is equivalent to a superheat correction factor of 0.98.

Step 2:

Determine the correction factor for liquid temperature. From the correction factor table found on page 13, a liquid temperature of $90\text{ }^\circ\text{F}$ corresponds to a factor of 1.05.

Step 3:

Correct the required valve capacity. This is done by first multiplying the evaporator capacity by the superheat correction factor and then dividing it by the liquid correction factor.
 $Q_{corrected} = 10/0.98/1.05 = 9.7$

Step 4:

Select the appropriate capacity table and choose the first valve whose capacity is greater than or equal to $Q_{corrected}$ at the required evaporating temperature and pressure drop. Using the R134a suction vapor capacity table found on page 13, the EVR 40 is selected as it has a capacity of 14.75 TR at $t_e = 30\text{ }^\circ\text{F}$ and $\Delta p = 3\text{ psi}$.

Valve selection example
(continued)

Hot gas line solenoid valve selection example
 With hot gas defrost, pressure in the evaporator quickly rises to a value near that of the condensing pressure and remains there until the defrost cycle has been completed. Therefore, when selecting valves for hot gas applications, sizing is based primarily on the condensing temperature t_c and the pressure drop D_p across the valve.

Example (with heat recovery)

Refrigerant: R134a
 Evaporator temperature: $t_e = 0\text{ }^\circ\text{F}$
 Condensing temperature: $t_c = 100\text{ }^\circ\text{F}$
 Hot gas temperature ahead of valve: $t_h = 180\text{ }^\circ\text{F}$
 Maximum allowable pressure drop across valve: $\Delta p = 5\text{ psi}$
 Output of heat recovery condenser: $Q_h = 15\text{ TR}$
 (required valve capacity)

The table capacity should be corrected by the corresponding factor as:

$$Q_{table} \times f_{evaporator} \times f_{superheat} = Q_o$$

Step 1:

Determine the correction factor for hot gas temperature ($t_h = t_c + 40\text{ }^\circ\text{F}$) by increasing the required valve capacity by 1% for each $10\text{ }^\circ\text{F}$ of actual superheat above the table rated superheat value of $40\text{ }^\circ\text{F}$.

In the example, an actual hot gas temperature of $180\text{ }^\circ\text{F}$ is $40\text{ }^\circ\text{F}$ higher than the calculated table value of ($t_h = t_c + 40\text{ }^\circ\text{F} = 140\text{ }^\circ\text{F}$). This is equivalent to a hot gas correction factor of 0.96.

Step 2:

Determine the correction factor for evaporator temperature. From the correction factor table found on page 19 an evaporator temperature of $0\text{ }^\circ\text{F}$ corresponds to a factor of 1.09.

Step 3:

Correct the required valve capacity. This is done by first multiplying the heat recovery capacity by the hot gas correction factor and then dividing it by the evaporator correction factor.


$$Q_{corrected} = 15 / 0.96 / 1.09 = 14.3$$

Step 4:


Select the appropriate capacity table and choose the first valve whose capacity is greater than or equal to $Q_{corrected}$ at the required condensing temperature and pressure drop. Using the R134a hot gas capacity table found on pages 19 and 20, the EVR 32 is selected as it has a capacity of 21.8 TR at $t_c = 100\text{ }^\circ\text{F}$ and $\Delta p = 5\text{ psi}$.

Design / Function


EVR 2 and EVR 3, NC

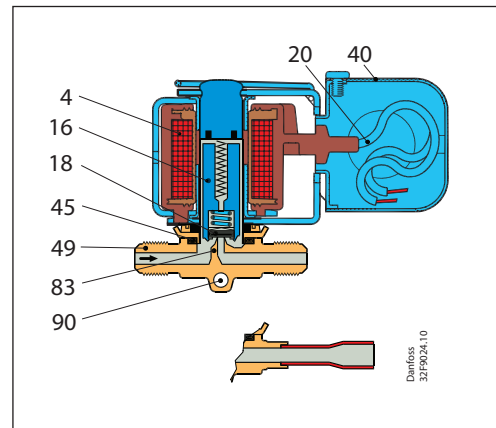

EVR 4 – EVR 22, NC

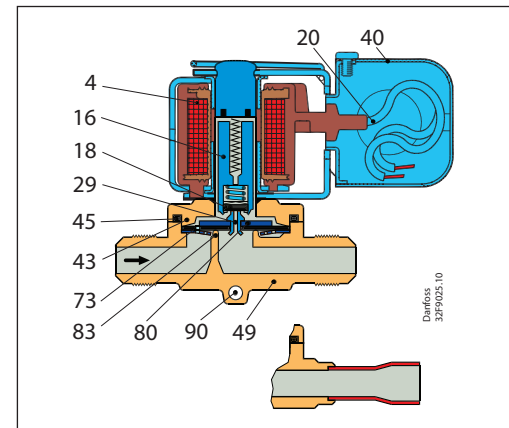

EVR 6 – EVR 15, NO

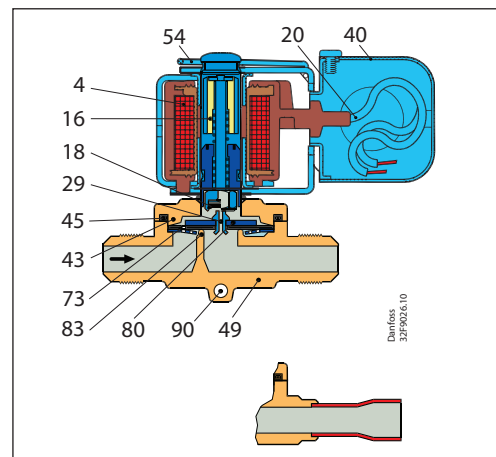

- 4. Coil
- 16. Armature
- 18. Valve plate
- 20. Earth terminal
- 29. Pilot orifice
- 40. Junction box
- 43. Valve cover
- 45. Gasket
- 49. Valve body
- 54. Spacer ring
- 73. Equalizing hole
- 80. Diaphragm
- 83. Valve seat
- 90. Fixing hole

Note:
The drawings are only representative.

EVR solenoid valves are based on two different design principles:

1. Direct operation
2. Servo operation

1: Direct operation

EVR 2 and EVR 3 are direct operated. The valve opens to admit full flow when the armature (16) is moved up into the magnetic field of the coil. The valve operates with a minimum differential pressure of 0 psi. The valve plate (18) is fitted directly to the armature (16). Inlet pressure and spring force act to close the valve when the coil is de-energized.

2a:


EVR 4 – EVR 22 are servo-operated with a “floating” diaphragm (80). The pilot orifice (29) is located in the center of the diaphragm. The pilot valve plate (18) is fitted directly to the armature (16). When the coil is de-energized, the valve port and pilot orifice are closed and the inlet pressure acts both above and below the diaphragm.

The valve port and pilot orifice are kept closed by the armature spring force and the differential pressure between inlet and outlet sides. When current is applied to the coil, the armature is pulled up into the magnetic field and the pilot orifice opens. This relieves pressure above the diaphragm because the space above it becomes connected to the outlet side of the valve. The differential pressure between inlet and outlet presses the diaphragm away from the valve seat (83) and the valve opens to admit full flow. A minimum differential pressure (0.7 psi for EVR 4 – EVR 22) is necessary to open the valve and keep it open. When the coil is de-energized, the pilot orifice closes. Then, via the equalizing port (73) the pressure above the diaphragm rises to the same value as the inlet pressure, which results in the valve port being closed by the diaphragm.


EVR 6 – EVR 15, NO, function in a manner opposite to the NC valves; they are open when the coil is de-energized. Normally open (NO) EVR valves are available with servo operation only.

Design / Function
(continued)

EVR 25

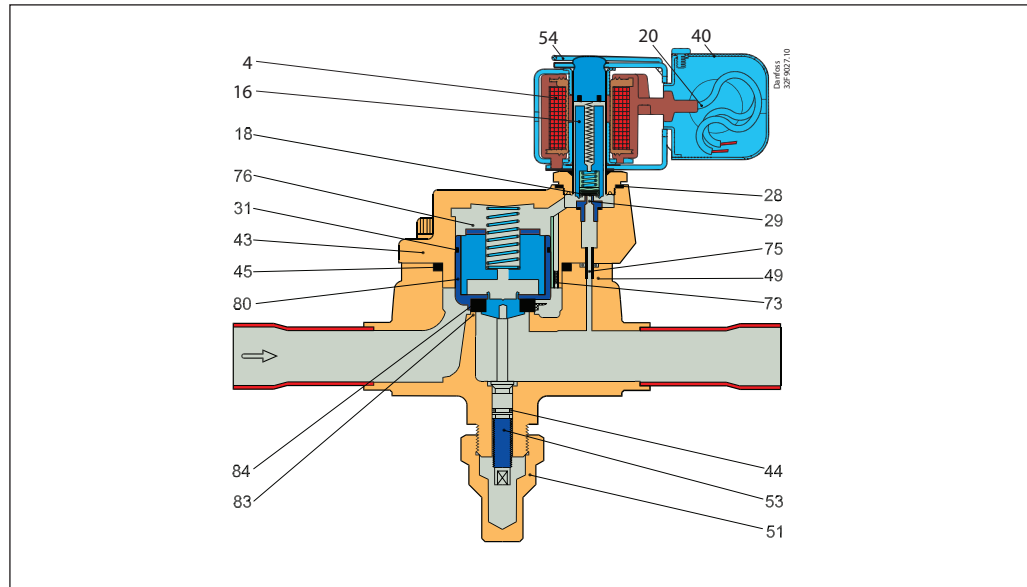

EVR 32 and EVR 40

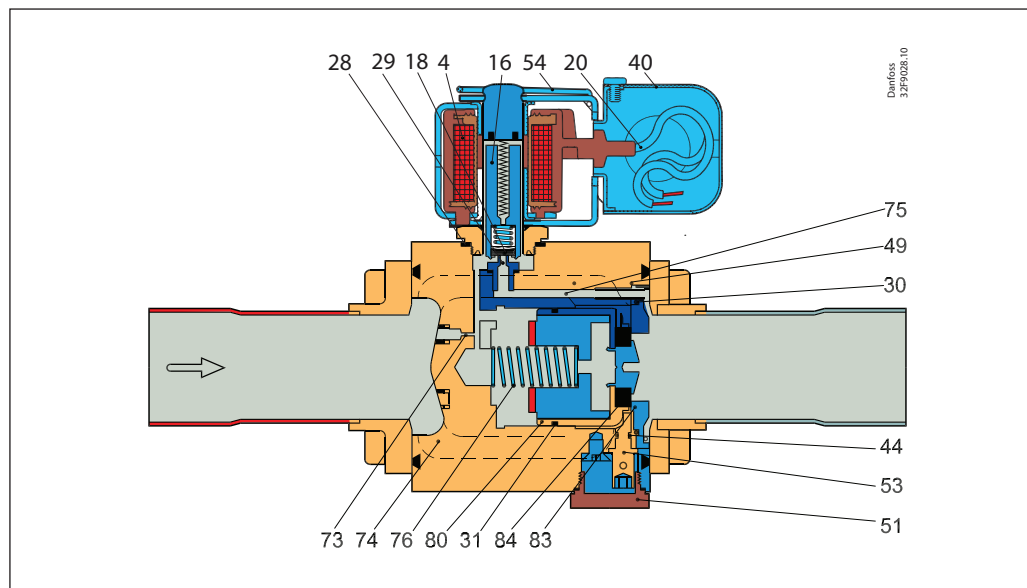

- 4. Coil
- 16. Armature
- 18. Pilot valve plate
- 20. Earth screw
- 28. Gasket
- 29. Pilot orifice
- 30. O-ring
- 31. Piston ring
- 40. Junction box
- 43. Valve cover
- 44. O-ring
- 45. Valve cover gasket
- 49. Valve body
- 51. Protective cap /blanking plug
- 53. Manual stem
- 73. Equalizing hole
- 74. Main passage
- 75. Pilot passage
- 76. Return spring
- 80. Servo piston
- 83. Main valve seat
- 84. Main valve plate

Note:
The drawings are only representative.

2b. Servo operation of EVR 25 – EVR 40

EVR 25. EVR 32 and EVR 40 are servo-operated piston valves.

The valves are closed when the coil is de-energized. In operation. EVR 25 is the same as for EVR 4 – EVR 22. but the design is different. The pilot unit is located in the cover and the servo unit is a piston (80) with a cast iron piston ring.

For EVR 25 – EVR 40, piston (80) and valve plate (84) will close against the valve seat (83) due to the differential pressure between inlet and outlet plus the force from the return spring (76).



When the coil is energized, the pilot orifice (29) is opened and pressure on the spring side of the piston is relieved. The pressure differential now opens the valve. The minimum differential required to keep the valve fully open is 1 psi.

Dimensions [in] and weights [lbs]

EVR 2 - EVR 8 NC, EVR 6 - EVR 8 NO, Solder connection

With junction box
EVR 2 - EVR 8 NC, EVR 6 - EVR 8 NO

With conduit boss
EVR 2 - EVR 8 NC, EVR 6 - EVR 8 NO

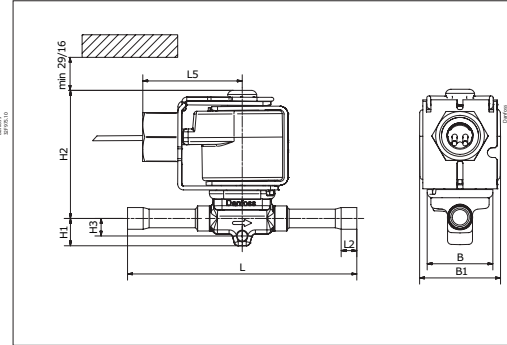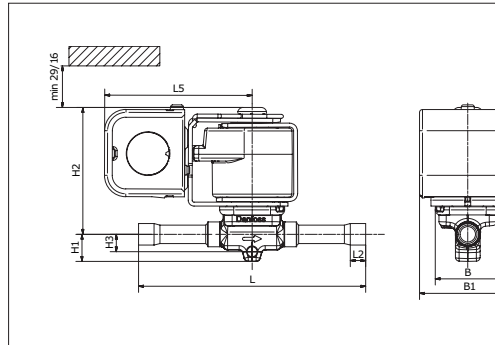

Coil net weight: 1 lb

Note:
The drawings are only representative.


Type	Connection		L	L ₂	L ₅		H ₁	H ₂	H ₃	H ₄	B	B ₁	Net weight with coil
	Normal size	Over-size			Junction box	Conduit boss							
EVR 2 NC	1/4	—	4 5/8	3/8	3	2	9/16	—	7/20	—	1 5/16	2 1/16	1.3
EVR 3 NC	1/4	—	4 5/8	3/8	3	2	9/16	2 13/16	7/20	—	1 5/16	2 1/16	1.3
EVR 3 NC	—	3/8	4 5/8	3/8	3	2	9/16	2 13/16	7/20	—	1 5/16	2 1/16	1.3
EVR 4 NC	3/8	—	4 3/8	3/8	3	2	9/16	3 1/16	3/8	—	1 7/16	2 1/16	1.4
EVR 4 NC	—	1/2	5	3/8	3	2	9/16	3 1/16	3/8	—	1 7/16	2 1/16	1.4
EVR 6 NC/NO	3/8	—	4 3/8	3/8	3	2	9/16	3 1/16	3/8	—	1 7/16	2 1/16	1.4
EVR 6 NC/NO	3/8	—	4 3/8	3/8	3	2	—	3 1/16	—	2 3/16	1 7/16	2 1/16	1.4
EVR 6 NC	—	1/2	5	3/8	3	2	9/16	3 1/16	3/8	—	1 7/16	2 1/16	1.4
EVR 6 NC	—	5/8	6 1/2	1/2	3	2	9/16	3 1/16	3/8	—	1 7/16	2 1/16	1.4
EVR 8 NC	3/8	—	4 5/8	3/8	3	2	9/16	3 1/16	3/8	—	1 7/16	2 1/16	1.4
EVR 8 NC	—	1/2	5	3/8	3	2	9/16	3 1/16	3/8	—	1 7/16	2 1/16	1.4
EVR 8 NC	—	5/8	6	1/2	3	2	9/16	3 1/16	3/8	—	1 7/16	2 1/16	1.4

Metric conversions:
1 in = 25.4 mm


Dimensions [in] and weights [lbs]

EVR 10 NC/NO, Solder connection

With junction box
EVR 10 NC/NO

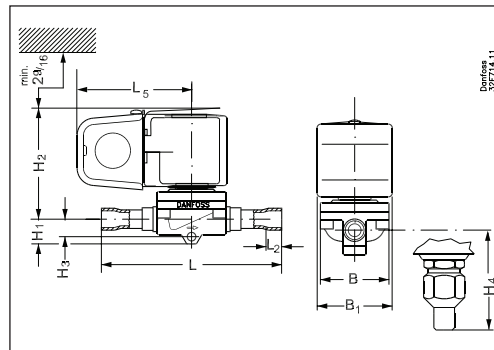

With conduit boss
EVR 10 NC/NO

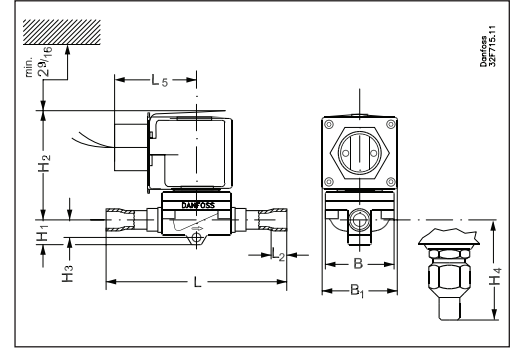

Coil net weight: 1 lb

Note:
The drawings are only representative.


Type	Connection		L	L ₂	L ₅		H ₁	H ₂	H ₃	H ₄	B	B ₁	Net weight with coil
	Normal size	Over-size			Junction box	Conduit boss							
EVR 10 NC	3/8	—	4 5/8	3/8	3	2	5/8	3 1/8	7/16	—	1 13/16	2 1/16	1.8
EVR 10 NC/NO	—	1/2	5	3/8	3	2	5/8	3 1/8	7/16	—	1 13/16	2 1/16	1.8
EVR 10 NC/NO	—	1/2	5	3/8	3	2	—	3 1/8	—	2 3/16	1 7/16	2 1/16	1.8
EVR 10 NC/NO	—	5/8	6 5/16	1/2	3	2	5/8	3 1/8	7/16	—	1 13/16	2 1/16	1.8

Metric conversions:
1 in = 25.4 mm


Dimensions [in] and weights [lbs]

EVR 15 - EVR 22 NC, EVR 15 NO, Solder connection

*With junction box
EVR 15 - EVR 22, NC/NO*

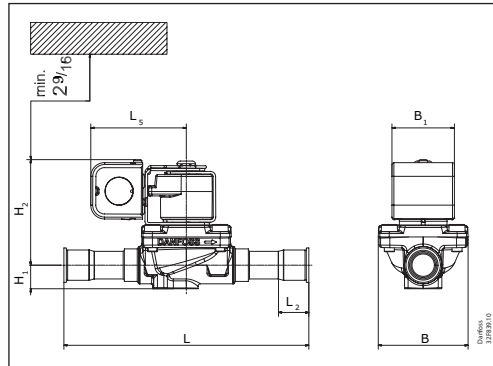

*With conduit boss
EVR 15 - EVR 22, NC/NO*

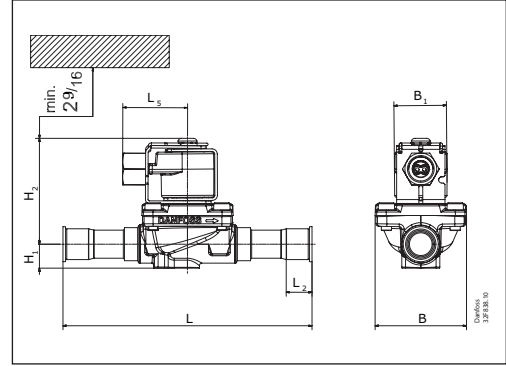

Coil net weight: 1 lb

Note:
The drawings are only representative.


Type	Connection		L	L ₂	L ₅		H ₁	H ₂	H ₃	H ₄	B	B ₁	Net weight with coil
	Normal size	Over-size			Junction box	Conduit boss							
EVR 15 NC/NO	5/8	—	6 7/8	1/2	3	2	3/4	3 3/8	3/4	—	2 3/16	2 1/16	2.4
EVR 15 NC/NO	5/8	—	6 7/8	1/2	3	2	—	3 3/8	—	2 1/8	2 3/16	2 1/16	2.4
EVR 15 NC	—	7/8	7 1/8	5/8	3	2	3/4	3 3/8	3/4	—	2 3/16	2 1/16	2.4
EVR 18 NC	7/8	—	7 1/8	5/8	3	2	3/4	3 3/8	3/4	—	2 3/16	2 1/16	2.4
EVR 18 NC	—	1 1/8	8 1/2	7/8	3	2	3/4	3 3/8	3/4	—	2 3/16	2 1/16	2.4
EVR 20 NC	7/8	—	7 1/2	5/8	3	2	25/32	3 9/16	—	—	2 13/16	2 1/16	3.4
EVR 20 NC	7/8	—	7 1/2	5/8	3	2	—	3 9/16	—	2 3/8	2 13/16	2 1/16	3.4
EVR 20 NC	—	1 1/8	8 1/2	7/8	3	2	25/32	3 9/16	—	—	2 13/16	2 1/16	3.4
EVR 22 NC	1 1/8	—	10 1/16	7/8	3	2	25/32	3 9/16	—	—	2 13/16	2 1/16	3.4
EVR 22 NC	—	1 3/8	11 1/16	1	3	2	25/32	3 9/16	—	—	2 13/16	2 1/16	3.4

*Metric conversions:
1 in = 25.4 mm*


Dimensions [in] and weights [lbs]

EVR 25 - EVR 40, Solder connection


With junction box
EVR 25

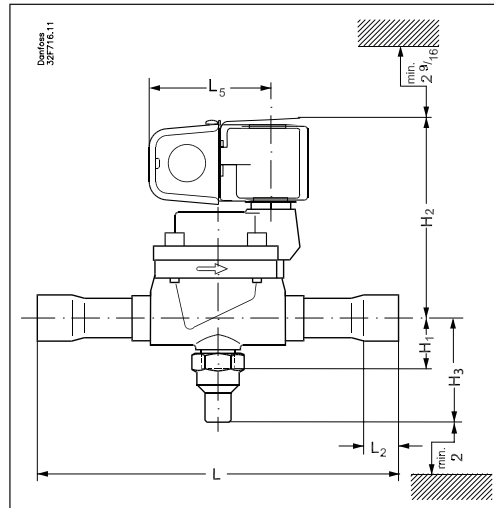


With conduit boss
EVR 25

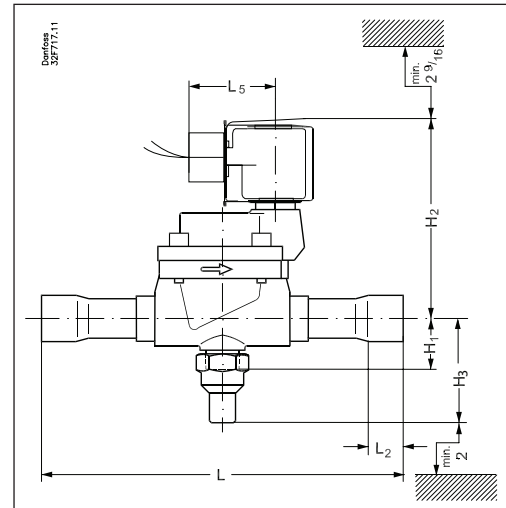

EVR 32 and EVR 40

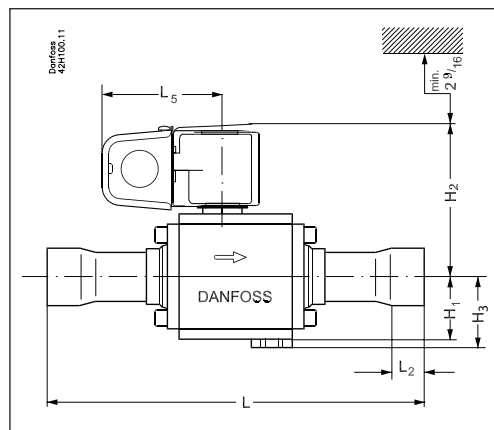

EVR 32 and EVR 40

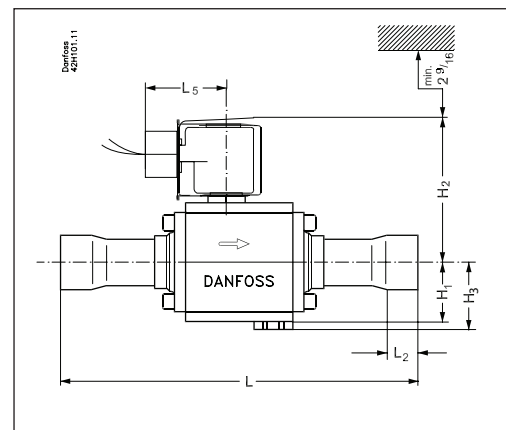

Coil net weight: 1 lb

Note:
The drawings are only representative.


Type	Connection		L	L ₂	L ₅		H ₁	H ₂	H ₄	B	Net weight with coil
	Normal size	Oversize			Junction box	Conduit boss					
EVR 25	1 1/8	—	10 1/16	7/8	3	2	1 1/2	5 7/16	2 13/16	3 1/4	6.9
EVR 25	—	1 3/8	11 1/16	1	3	2	1 1/2	5 7/16	2 13/16	3 1/4	7.7
EVR 32	1 3/8	—	11 1/16	1	3	2	1 7/8	4 3/8	2 1/8	3 3/16	9.5
EVR 32	—	1 5/8	11 1/16	1 1/8	3	2	1 7/8	4 3/8	2 1/8	3 3/16	9.7
EVR 40	1 5/8	—	11 1/16	1 1/8	3	2	1 7/8	4 3/8	2 1/8	3 3/16	10.0
EVR 40	—	2 1/8	11 1/16	1 1/8	3	2	1 7/8	4 3/8	2 1/8	3 3/16	10.0

Metric conversions:
1 in = 25.4 mm


Dimensions [in]
and weights [lbs]

EVR 2 - 6 NC, Flare connection

With junction box
EVR 2 – 6 NC

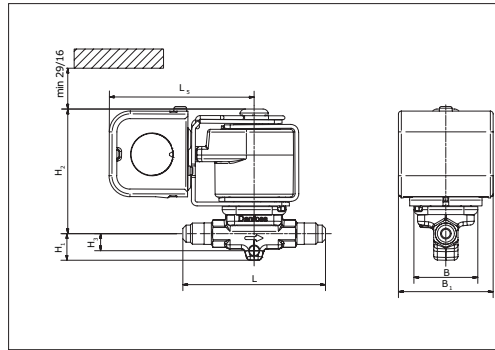

With conduit boss
EVR 2 – 6 NC

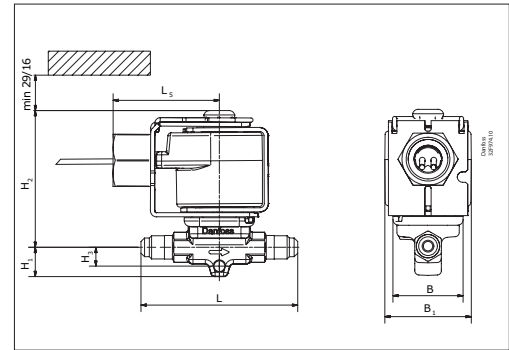

Coil net weight: 1 lb

Note:
The drawings are only representative.

Type	Connection		L	L ₅		H ₁	H ₂	H ₃	H ₄	B	B ₁	Net weight with coil
	Normal size	Oversize		Junction box	Conduit boss							
EVR 2 NC	1/4	—	2 5/16	3	2	9/16	2 13/16	5/16	—	1 5/16	2 1/16	1.3
EVR 3 NC	1/4	—	2 5/16	3	2	9/16	2 13/16	5/16	—	1 5/16	2 1/16	1.3
EVR 3 NC	—	3/8	2 7/16	3	2	9/16	2 13/16	5/16	—	1 5/16	2 1/16	1.3
EVR 4 NC	3/8	—	2 3/4	3	2	9/16	2 7/8	3/8	—	1 7/16	2 1/16	1.4
EVR 4 NC	—	1/2	3	3	2	9/16	2 7/8	3/8	—	1 7/16	2 1/16	1.4
EVR 6 NC	3/8	—	2 3/4	3	2	9/16	2 7/8	3/8	—	1 7/16	2 1/16	1.4
EVR 6 NC	3/8	—	2 3/4	3	2	9/16	2 7/8	—	2 3/16	1 7/16	2 1/16	1.4
EVR 6 NC	—	1/2	3	3	2	9/16	2 7/8	3/8	—	1 7/16	2 1/16	1.4

Metric conversions
1 in = 25.4 mm

Spare parts

Type	Code no.			
	Seal kit	Service kit	Piston service kit	Pilot service kit
EVR 2	032F8196	032F0230	—	—
EVR 3	032F8196	032F0230	—	—
EVR 4	032F8165	—	—	—
EVR 6	032F8165	032F8166	—	—
EVR 8	032F8165	032F8166	—	—
EVR 10	032F8196	032F0185	—	—
EVR 15	032F8196	032F0187	—	—
EVR 18	032F8196	032F0187	—	—
EVR 20	—	032F0189	—	—
EVR 22	—	032F0189	—	—
EVR 25	—	—	032F3236	042H0165
EVR 32	—	—	042H0172	042H0165
EVR 40	—	—	042H0173	—
EVR 6 NO	032F8165	—	—	—
EVR 10 NO	032F8196	—	—	—
EVR 15 NO	032F8196	—	—	—

Spare parts, contents

Seal kit	Service kit	Piston service kit	Pilot service kit
O-ring Gasket	Diaphragm assembly Armature assembly Rubber gasket Screws Torx key Snap fastener Nut	Piston assembly Plastic block Spring Piston ring Rubber gasket Snap fastener Nut	Armature tube assembly Snap fastener Armature Orifice Gaskets Nut

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.